Frigider

Refrigerator

CBI7702

Citiţi mai întâi acest manual!
Stimate client,
Sperăm că veţi fi mulţumit de acest produs, care a fost fabricat în unităţi moderne şi verificat conform celor mai riguroase proceduri de control al calităţii.
Vă recomandăm să citiţi cu atenţie întregul manual înainte de a folosi produsul; păstraţi manualul la îndemână, pentru a-l putea consulta pe viitor.

Acest manual
• Vă ajută să folosiţi aparatul eficient şi în siguranţă.
• Citiţi manualul înainte de a instala şi utiliza produsul.
• Respectaţi instrucţiunile, în special cele referitoare la siguranţă.
• Păstraţi manualul într-un loc accesibil, pentru a-l putea consulta în viitor.
• Citiţi şi celelalte documente furnizate cu produsul.
Reţineţi că acest manual se poate adresa şi altor modele.

Simboluri şi descrierea acestora
Acest manual de instrucţiuni conţine următoarele simboluri:
ⓘ Informaţii importante sau sfaturi utile privind utilizarea.
⚠ Pericol de moarte sau pagube materiale.
⚠ Avertisment privind tensiunea electrică.

CUPRINS

1 Frigiderul 3

2 Avertismente importante privind siguranţa 4

Destinaţia produsului..... 4
Informaţii generale privind siguranţa..... 4
Pentru produsele cu water Dispenser……...6
Siguranţa copiilor..... 6
Avertisment HCA……7
Modalităţi de reducere a consumului de energie..... 7

3 Instalarea 8

Instrucţiuni pentru transportul ulterior al frigiderului..... 8
Înainte de a utiliza frigiderul..... 8
Conexiunea electrică..... 8
Îndepărtarea ambalajului.....9
Depozitarea la deşeuri a frigiderului vechi..... 9
Amplasarea şi instalarea.....9
Înlocuirea becului interior..... 10
Inversarea uşilor.....11

4 Pregãtirea 12

5 Utlizarea frigiderului 13

Buton de reglare termostat.....13
Dezgheţarea…….....13
Compartiment de zero grade.....14

6 Întreţinere şi curăţare 15
Protejarea suprafeţelor din plastic… 15

7 Soluţii recomandate pentru problem 16

1 Frigiderul

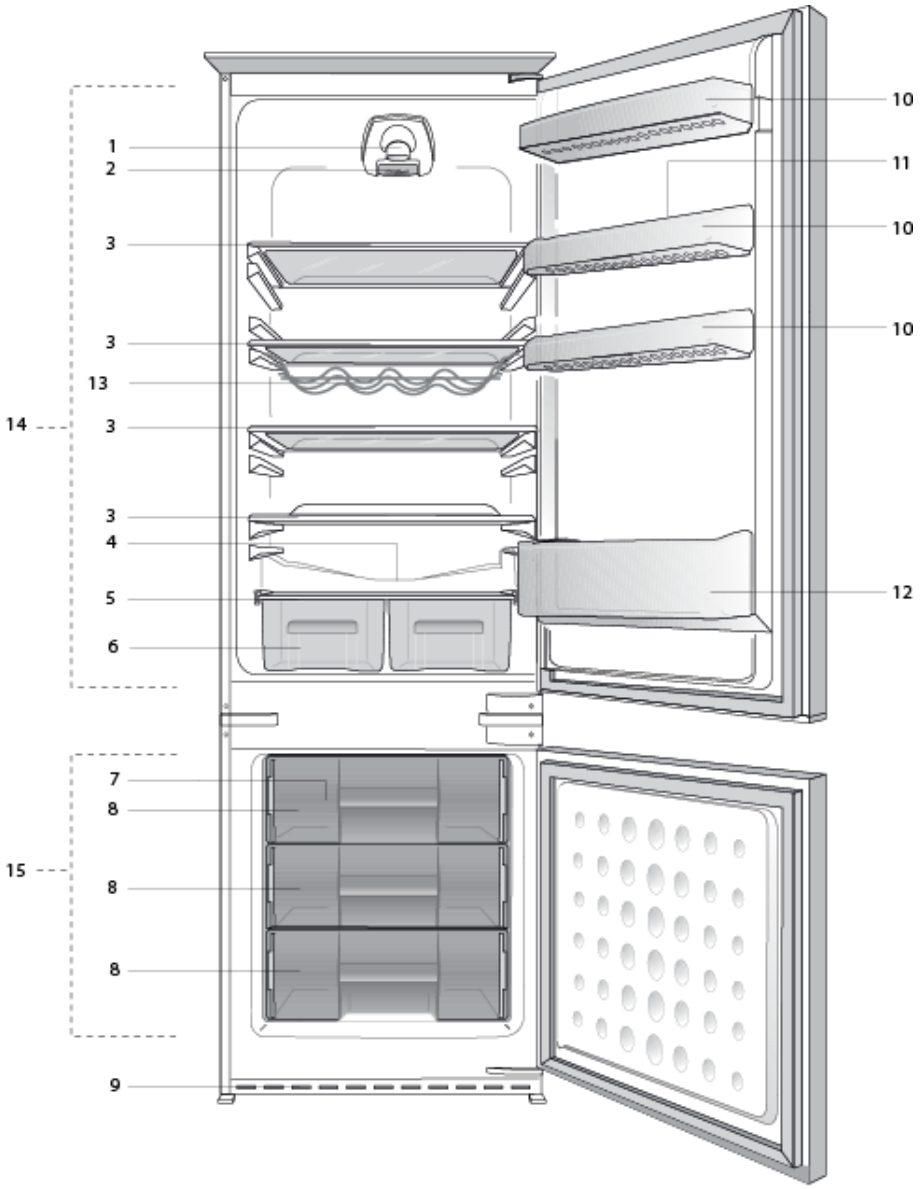

1. Buton de reglare temperatură
2. Bec interior
3. Rafturi ajustabile
4. Canal de colectare a apei dezgheţate – Tub de scurgere
5. Capac cutii legume şi fructe
6. Cutii legume şi fructe
7. Suport gheaţă
8. Compartimentul congelatorului
9. Grila de aer
10. Etajerã
11. Tăviţă pentru ouă
12. Raft pentru sticle
13. Suport sticle
14. Compartimentul frigiderului
15. Compartimentul congelatorului

*** Optional**

Figurile din acest manual sunt schematice, fiind posibil să nu fie identice cu produsul dvs. Componentele care nu există în dotarea produsului achiziţionat de dvs. Sunt prezente pe alte modele.

2 Avertismente importante privind siguranţa

Vă rugăm să citiţi următoarele instrucţiuni. Dacă acestea nu sunt respectate, se pot produce accidentări sau pagube materiale. Nerespectarea duce la anularea tuturor garanţiilor şi asigurărilor privind fiabilitatea.
Durata de viaţă a produsului pe care l-aţi achiziţionat este de 10 ani. În această perioadă, vor fi asigurate piesele de schimb necesare pentru funcţionarea aparatului conform parametrilor descrişi.

Destinaţia produsului

Acest aparat este destinat uzului casnic şi aplicaţiilor similare, cum ar fi

- bucătăriile destinate personalului din magazine, birouri şi alte medii profesionale;
- ferme şi utilizarea de către clienţi ai hotelurilor, motelurilor şi alte medii de tip rezidenţial;
- medii de tipul pensiunilor;
- catering şi alte aplicaţii similare din afara zonei comerţului cu amănuntul.

Nu trebuie folosit în aer liber. Utilizarea în aer liber nu este permisă, chiar dacă zona este acoperită.

Informaţii generale privind siguranţa

• Când doriţi să aruncaţi/depozitaţi la deşeuri produsul, vă recomandăm să luaţi legătura cu un service autorizat pentru detalii despre normele în vigoare.

• Luaţi legătura cu un service autorizat dacă aveţi întrebări sau probleme cu frigiderul. Nu interveniţi şi nu permiteţi altor persoane să intervină asupra frigiderului fără a anunţa un service autorizat.

• Nu mâncaţi îngheţata şi cuburile de gheaţă imediat după ce au fost scoase din congelator! (Acestea pot provoca degerături în interiorul gurii).

• Nu introduceţi băuturi la sticlă sau la doză în congelator. Acestea pot crăpa.

• Nu atingeţi alimentele congelate cu mâna neprotejată; acestea se pot lipi de mână.

• Nu folosiţi vapori şi substanţe de curăţare vaporizate la curăţarea şi dezgheţarea frigiderului. În caz contrar, vaporii pot ajunge la componentele electrice, provocând un scurtcircuit sau un şoc electric.

• Nu folosiţi componentele frigiderului - cum ar fi uşa - pe post de punct de sprijin sau treaptă.

• Nu folosiţi aparate electrice în frigider.

• Nu deterioraţi circuitul de racier cu obiecte ascuţite sau cu maşini de găurit. Agentul frigorific poate ieşi în cazul perforării circuitelor evaporatorului, conductelor sau suprafeţelor şi poate cauza iritarea pielii şi afecţiuni oculare.

• Nu acoperiţi sau blocaţi orificiile de ventilare ale frigiderului.

• Reparaţiile aparatelor electrice pot fi efectuate numai de personal calificat. Reparaţiile efectuate de persoane necalificate pot reprezenta un pericol pentru utilizator.

• În cazul unei defecţiuni sau în timpul lucrărilor de întreţinerea sau reparaţii, deconectaţi frigiderul de la priză sau scoateţi siguranţa corespunzătoare prizei.

• Trageţi de ştecher, nu de cablu.

• Închideţi bine recipientele cu băuturi cu conţinut ridicat de alcool şi amplasaţi-le vertical.

• Nu depozitaţi pe acest aparat substanţe explozive, cum ar fi sprayurile cu agent de propulsare inflamabil.

• Nu folosiţi dispozitive mecanice sau alte mijloace de accelerare a procesului de dezgheţare, alteledecât cele recomandate de către producător.

• Acest aparat nu este destinat utilizării de către persoane (inclusiv copii) cu capacităţi fizice, senzoriale sau mentale reduse sau fără experienţă, cu excepţia cazului în care sunt supravegheate sau au fost instruite cu privire la utilizarea aparatului de către persoana responsabilă pentru siguranţa lor.

• Nu utilizaţi frigiderul dacă este deteriorat. Dacă aveţi dubii, luaţi legătura cu un service.

• Siguranţa sistemului electric al frigiderului este garantată doar dacă sistemul de împământare al locuinţei dvs. corespunde standardelor.

• Expunerea aparatului la ploaie, zăpadă, soare şi vânt afectează siguranţa sistemului electric.

• Pentru a evita pericolele, luaţi legătura cu un service autorizat dacă depistaţi o defecţiune a cablului de alimentare etc.

• Nu conectaţi frigiderul la priză în timpul instalării. Pericol de moarte sau de accidentare gravă.

• Acest frigider este destinat exclusiv păstrării alimentelor. Nu trebuie folosit în alte scopuri.

• Eticheta cu datele tehnice ale aparatului se află în interiorul frigiderului, în partea stânga-jos.

• Nu conectaţi frigiderul la sisteme de economisire a energiei electrice, deoarece acestea îl pot defecta.

• Dacă frigiderul este dotat cu o lampă albastră, nu o priviţi prin dispozitive optice.

• După deconectarea ştecherului frigiderelor cu comandă manuală, aşteptaţi minim 5 minute înainte de a-l reconecta.

• În cazul înstrăinării frigiderului, acest manual trebuie transmis noului proprietar.

• Evitaţi deteriorarea cablului de alimentare în timpul mutării frigiderului. Pentru prevenirea incendiilor, cablul de alimentare nu trebuie răsucit. Nu amplasaţi obiecte grele pe cablul de alimentare. Nu atingeţi ştecherul de alimentare cu mâinile ude.

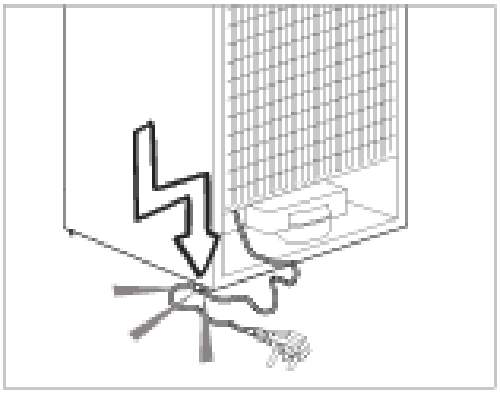

• Nu conectaţi frigiderul la priză dacă aceasta nu este bine fixată.

• Din motive de siguranţă, nu stropiţi cu apă componentele exterioare sau interioare ale frigiderului.

• Nu pulverizaţi materiale inflamabile, cum ar fi propan etc., în apropierea frigiderului. Pericol de incendiu şi explozie.

• Nu amplasaţi obiecte umplute cu apă pe frigider. Pericol de şoc electric sau incendiu.

• Nu supraîncărcaţi frigiderul cu alimente. Alimentele pot cădea la deschiderea uşii, provocând vătămări corporale sau deteriorând frigiderul. Nu amplasaţi obiecte pe frigider, deoarece acestea pot cădea la deschiderea sau închiderea uşii frigiderului.

• Nu păstraţi în frigider materiale care necesită păstrarea la o anumită temperatură, cum ar fi vaccinurile, medicamentele sensibile la temperatură, materialele ştiinţifice etc.

• Dacă nu veţi folosi frigiderul o perioadă mai lungă de timp, deconectaţi-l de la priză. Izolaţia defectă a cablului electric poate provoca incendii.

• Lamelele ştecherului trebuie curăţate regulat, în caz contrar pot provoca incendii.

• Dacă picioarele reglabile nu sunt amplasate corect, frigiderul se poate deplasa. Reglaţi picioarele astfel încât frigiderul să aibă o poziţie stabilă pe podea.

• Dacă frigiderul este dotat cu mâner, nu apucaţi de mâner atunci când mutaţi frigiderul, deoarece mânerul se poate rupe.

• Dacă este necesară amplasarea aparatului lângă alt frigider sau congelator, distanţa dintre aparate trebuie să fie de minim 8 cm. În caz contrar, este posibil să apară condens pe pereţii laterali învecinaţi.

Pentru produsele cu water dispenser:

• Presiunea din reţeaua de apă nu trebuie să scadă sub 1 bar. Presiunea din reţeaua de apă nu trebuie să depăşească 8 bari.

• Folosiţi numai apă potabilă.

Siguranţa copiilor

• Dacă uşa este dotată cu o încuietoare, nu lăsaţi cheia la îndemâna copiilor.

• Nu lăsaţi copiii să se joace cu aparatul.

Informaţii privind reciclarea deşeurilor de echipamente electrice şi electronice (DEEE)

Conform prevederilor legislaţiei privind gestionarea deşeurilor, este interzisã eliminarea deşeurilor de echipamente electrice şi electronice (DEEE) alãturi de deşeurile municipale nesortate. Ele trebuie predate la punctele municipale de colectare, societãţile autorizate de colectare/reciclare sau distribuitori (în cazul în care se achiziţioneazã echipamente noi de acelaşi tip).

Autoritãţile locale trebuie sã asigure spaţiile necesare pentru colectarea selectivã a deşeurilor precum şi funcţionalitatea acestora. Contactaţi societatea de salubrizare sau compartimentul specializat din cadrul primãriei pentru informaţii detaliate. Deşeurile de echipamente electrice şi electronice pot fi predate şi distribuitorilor, la achiziţionarea de echipamente noi de acelaşi tip (schimb 1 la 1).

Predarea, de cãtre utilizatori, a deşeurilor de echipamente electrice şi electronice, la punctele de colectare municipale, societãţile autorizate de colectare/reciclare sau distribuitori (în cazul în care se achiziţioneazã echipamente noi de acelaşi tip) faciliteazã refolosirea, reciclarea sau alte forme de valoificare a acestora.

Informaţii cu privire la punctele de colectare a deşeurilor de echipamente electrice şi electronice, se gãsesc pe site-ul Ministerului Mediului şi Gospodãririi Apelor, la adresa: www.mmediu.ro.

Deşeurile de echipamente electrice şi electronice pot conţine substanţe periculoase care pot avea un impact negativ asupra mediului şi sanătăţii umane în cazul în care DEEE nu sunt colectate selectiv şi gestionate conform prevederilor legale.

Simbolul de mai jos (o pubelã cu roţi baratã cu douã linii în formã de X), aplicat pe un echipament electric sau electronic, semnificã faptul ca acesta face obiectul unei colectări separate şi nu poate fi eliminat împreunã cu deşeurile municipale nesortate.

Avertisment HCA

Dacă produsul dvs. este echipat cu un sistem de răcire cu gaz R600a: Acest gaz este inflamabil. Din acest motiv, aveţi grijă să nu deterioraţi sistemul de răcire şi conductele în timpul utilizării şi transportului. În cazul deteriorării, feriţi produsul de potenţialele surse de incendiu şi ventilaţi încăperea în care se află.

Acest avertisment nu este destinat produselor echipate cu un sistem de răcire cu gaz R134a.

Tipul de gaz folosit la produsul dvs. este indicat pe plăcuţa de identificare amplasată în interior, pe partea stângă. Nu aruncaţi produsul în foc.

Modalităţi de reducere a consumului de energie

• Nu lăsaţi uşa frigiderului deschisă perioade lungi de timp.
• Nu introduceţi alimente sau băuturi calde în frigider.
• Nu supraîncărcaţi frigiderul pentru a nu bloca circulaţia aerului în interior.
• Nu instalaţi frigiderul în bătaia razelor soarelui sau lângă aparate care emit căldură, cum ar fi cuptoare, maşini de spălat vase sau calorifere.
• Păstraţi alimentele în recipiente închise.
• Volumul maxim pentru depozitarea alimentelor în congelator este obţinut fără a folosi raftul sau sertarul congelatorului.Consumul de energie al frigiderului este determinat pentru situaţia în care congelatorul este complet încărcat, fără raft sau sertar. Este permisă folosirea unui raft sau sertar adaptat la forma şi dimensiunea alimentelor de congelat.

3 Instalarea

⚠ Reţineţi că producătorul nu îşi asumă responsabilitatea în cazul nerespectării instrucţiunilor din manual.

Instrucţiuni pentru transportul ulterior al frigiderului

1. Frigiderul trebuie golit şi curăţat înainte de a fi transportat.
2. Rafturile, accesoriile, compartimentul pentru legume etc. trebuie fixate cu bandă adezivă pentru a evita deplasarea acestora.
3. Ambalajul trebuie fixat cu bandă groasă şi sfoară rezistentă; respectaţi regulile de transport tipărite pe ambalaj.

Înainte de a utiliza frigiderul

Înainte de a utiliza frigiderul, verificaţi următoarele aspecte:

1. Atașați cele doua limitatoare din plastic așa cum este ilustrat in desenul alãturat. Limitatoarele din plastic sunt destinate să păstreze distanța, care va asigura circulația aerului între frigider și peretele. (Desenul este redactat ca o reprezentare și poate să nu fie identic cu produsul.)

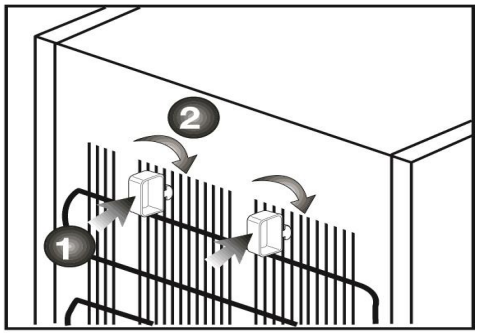

2. Curăţaţi interiorul frigiderului conform recomandărilor din secţiunea "Întreţinere şi curăţare".

3. Conectaţi frigiderul la priză. La deschiderea uşii, lampa frigiderului se va aprinde.

4. Veţi auzi un zgomot la pornirea compresorului. De asemenea, este posibil să auziţi alte sunete provenite de la lichidele şi gazele din sitemul de răcire, indiferent dacă compresorul funcţionează sau nu; aceste zgomote sunt normale.

5. Este posibil ca muchiile frontale ale frigiderului să se încălzească. Acest fenomen este normal. Aceste zone se încălzesc pentru a evita condensul.

Conexiunea electrică

Conectaţi produsul la o priză cu împământare şi cu o siguranţă de capacitate adecvată.

Important:

Conexiunea trebuie să respecte legislaţia în vigoare.

- Ştecherul cablului de alimentare trebuie să fie uşor accesibil după instalare.
- Tensiunea şi capacitatea siguranţei sunt indicate în secţiunea "Specificaţii".
- Tensiunea reţelei electrice trebuie să corespundă tensiunii specificate.

Nu utilizaţi cabluri prelungitoare şi triplu ştechere pentru conectare.

⚠ Cablurile de alimentare deteriorate trebuie înlocuite de un electrician calificat.

⚠ Produsul nu trebuie utilizat înainte de a fi reparat! Pericol de electrocutare!

Îndepărtarea ambalajului

Ambalajele pot fi periculoase pentru copii. Nu lăsaţi ambalajele la îndemâna copiilor; depozitaţi-le la deşeuri conform normelor în vigoare. Nu le depozitaţi împreună cu deşeurile menajere.
Ambalajul frigiderului este produs din materiale reciclabile.

Depozitarea la deşeuri a frigiderului vechi

Depozitaţi la deşeuri aparatul vechi fără a afecta mediul înconjurător. Pentru informaţii despre depozitarea la deşeuri, puteţi lua legătura cu distribuitorul autorizat, cu serviciul de salubritate sau cu autorităţile locale. Înainte de a depozita frigiderul la deşeuri, tăiaţi ştecherul şi, dacă uşa este dotată cu sisteme de blocare, distrugeţi-le pentru a împiedica blocarea copiilor în interior.

Amplasarea şi instalarea

În cazul în care ușa de intrare a camerei în care va fi instalat frigiderul nu este suficient de lată pentru ca aparatul să treacă prin ea, faceți apel la un service autorizat pentru a-i demonta ușile și pentru a-l trece lateral prin ușa încăperii.
1. Instalați frigiderul într-un loc care permite ușurința în utilizare.
2. Păstrați frigiderul departe de surse de căldură, locuri umede și lumina directă a soarelui.
3. Pentru a se realiza o funcționare eficientă, în jurul frigiderului trebuie să existe o ventilație adecvată. Dacă frigiderul urmează să fie amplasat într-o nișă în perete, trebuie să existe cel puțin 5 cm distanță cu plafonul și cel puțin 5 cm cu peretele. Nu amplasați produsul pe materiale cum ar fi covorul sau mocheta.
4. Amplasați frigiderul pe o suprafață plană pe podea pentru a preveni șocurile.

Înlocuirea becului interior

Dacă becul nu mai funcţionează, procedaţi astfel:
1 - Întrerupeţi alimentarea cu energie electrică şi scoateţi cablul de alimentare. Pentru un acces mai uşor, puteţi scoate rafturile.
2 - Utilizaţi o şurubelniţă cu cap lat pentru a îndepărta capacul lămpii.
3 - Verificaţi mai întâi dacă becul este corect înşurubat. Conectaţi din nou ştecherul şi porniţi aparatul.
Dacă becul funcţionează, montaţi la loc capacul lămpii introducând lamela fixare din spate, apoi apăsaţi-l pentru a fixa cele două lamele din faţă.
4 - Dacă lumina tot nu funcţionează, întrerupeţi alimentarea cu energie electrică şi scoateţi cablul de alimentare. Înlocuiţi becul cu un bec nou de 15 watt (max) cu duză de înşurubare (SES).
5 - Aruncaţi becul ars.
Puteţi obţine becuri de schimb de la magazinele de articole electrice sau de bricolaj.

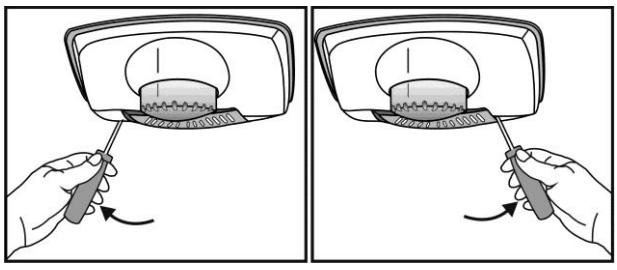

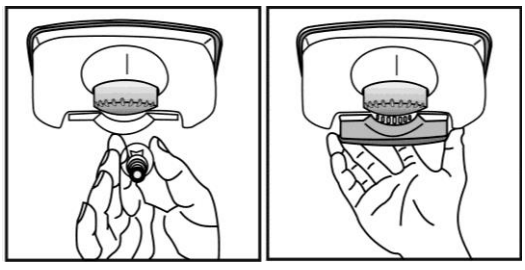

Inversarea uşilor

Respectaţi ordinea numerotată

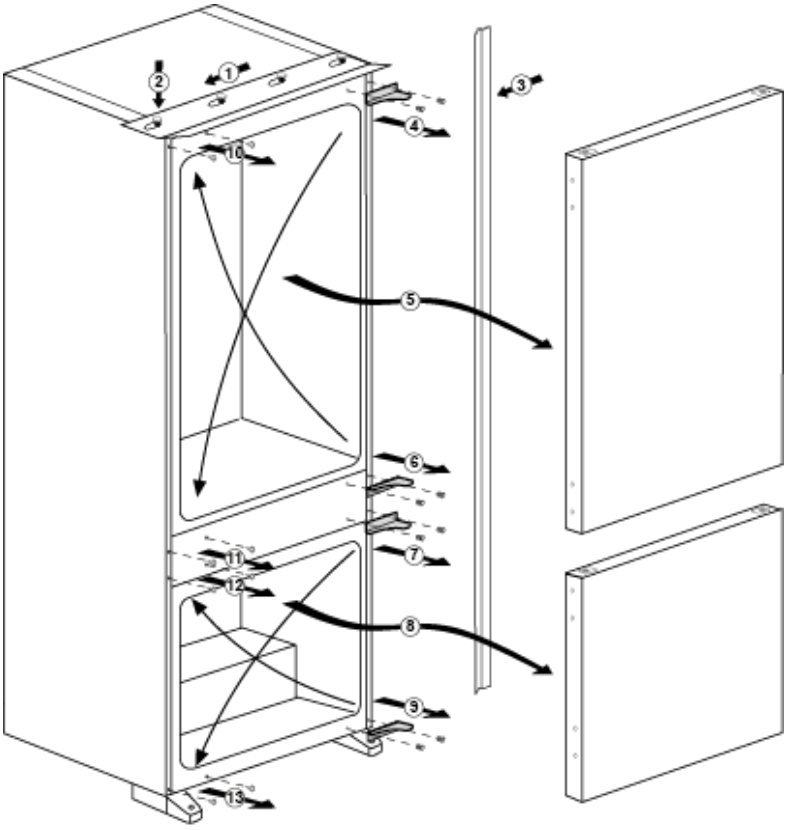

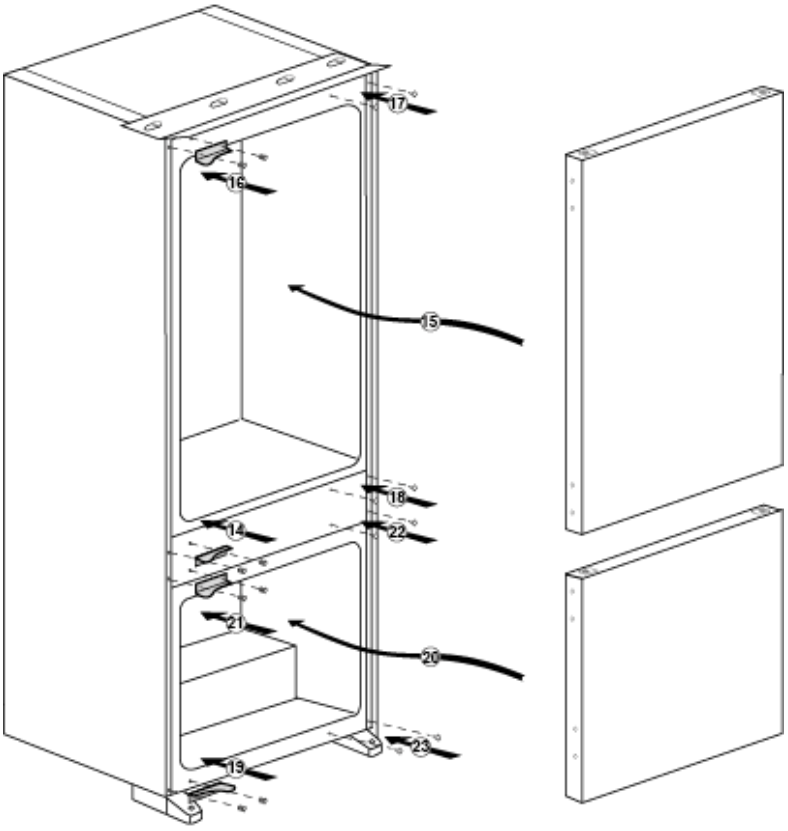

4 Pregãtirea

- Instalați frigiderul la cel puțin 30 cm distanță față de sursele emitente de căldură cum ar fi plite, cuptoare, sisteme de încălzire centrală și sobe și la cel puțin 5 cm față de cuptoarele electrice și nu-l amplasați sub lumina directa a soarelui.
- Temperatura mediului ambiant a camerei în care instalați frigider dvs. ar trebui să fie de cel puțin 10°C. Nu este recomandată funcționarea frigiderului într-un mediu mai rece deoarece se pot produce perturbații în buna funcționare a aparatului.
- Asigurați-vă că interiorul frigiderului este bine curățat.
- Dacă două frigidere urmează să fie instalate unul lângă celălalt, distanța dintre ele ar trebui să fie de cel puțin 2 cm.
- Când frigiderul funcționează pentru prima dată, vă rugăm să respectați următoarele instrucțiuni în primele șase ore:
- Ușa nu trebuie deschisă frecvent.
- Acesta trebuie să funcționeze fără nici un aliment în interior.
- Nu deconectați frigiderul de la rețeaua electrică.
- În cazul în care are loc o pană de curent vă rugăm să consultați avertismentele din secțiunea "Soluțiile recomandate pentru problemele".
- Ambalajul original şi materialele de protecţie ar trebui păstrate pentru transportul sau mutarea ulterioară.

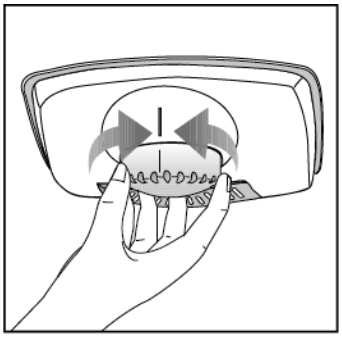

Buton de reglare termostat

Temperatura interioară a frigiderului se modifică din următoarele motive:

- Temperatura exterioară
- Deschiderea frecventă a uşii şi lăsarea uşii deschise perioade lungi de timp,
- Alimente introduse în frigider fără a fi răcite la temperatura camerei,
- Amplasarea frigiderului în încăpere (de ex. expunerea la soare).
- Variaţiile temperaturii interioare datorate acestor factori pot fi compensate folosind termostatul. Numerele din jurul termostatului indică gradul de răcire.
- Dacă temperatura ambientală depăşeşte 32 °C, rotiţi butonul termostatului în poziţia maximă.
- Dacă temperatura ambientală este mai mică de 25 °C, rotiţi butonul termostatului în poziţia minimă.

Dezgheţarea

A) Compartimentul frigiderului

Compartimentul frigiderului se dezgheaţă complet automat. În timpul răcirii frigiderului, pe interiorul peretelui din spate se pot forma picături de apă şi un strat de gheaţă de 7-8mm. Acest fenomen este normal şi se datorează sistemului de răcire.

Sistemul de dezgheţare automată asigură dezgheţarea automată a stratului de gheaţă la anumite intervale de timp. Nu este necesară răzuirea manuală a gheţii sau ştergerea picăturilor de apă.

Apa rezultată în urma dezgheţării curge în canalul de colectare a apei şi ajunge prin conducta de evacuare pe evaporator, unde se evaporă.

Verificaţi periodic dacă conducta de evacuare nu este înfundată şi curăţaţi-o cu beţişorul din orificu dacă este cazul.

Compartimentul de congelare nu se dezgheaţă automat, pentru a preveni alterarea alimentelor congelate.

Compartimentul congelatorului se dezgheaţă automat.

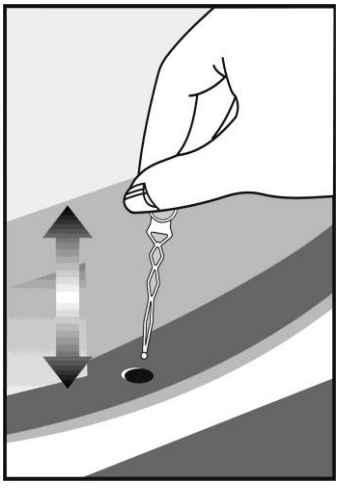

B) Compartimentul frigiderului

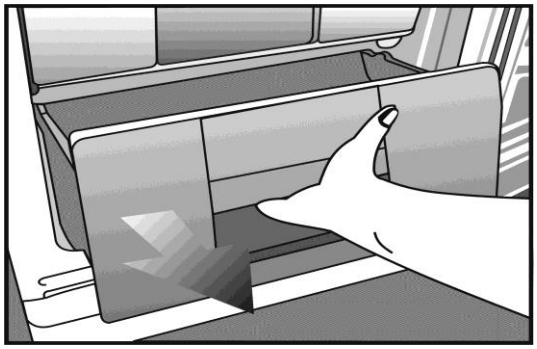

Vã recomandãm sã dezgheţaţi compartimentul congelator cel puţin de douã ori pe an sau când stratul de gheaţã are o grosime excesivã.
Înainte de dezgheţare, puneţi butonul de reglare a termostatului pe poziţia superioarã pentru ca alimentele sã înmagazineze un plus de frig. În acest timp temperatura frigiderului nu trebuie sã fie prea scãzutã.
- Debranşaţi aparatul de la reţea.
- Scoateţi apoi alimentele congelate, înfãşuraţi-le în mai multe coli de hârtie şi aşezaţi-le într-un loc rãcoros.
- Lãsaţi uşa deschisã pentru o dezgheţare rapidã şi plasaţi vase cu apã caldã (max. 80^0C) în interior.
- Formarea gheţii este un fenomen normal.
- Cantitatea şi rapiditatea de acumulare depinde de condiţiile ambientale şi de frecvenţa deschiderii uşii.
- Acumularea gheţii, în special în partea superioarã a compartimentului, este un fenomen natural şi nu împiedicã buna funcţionare a aparatului.
- Se recomandã efectuarea dezgheţãrii, când cantitatea de alimente congelate este minimã.
- Nu folosiţi obiecte metalice ascuţite pentru a îndepãrta gheaţa, deoarece riscaţi perforarea vaporizatorului.
- Nu folosiţi uscãtoare de pãr sau alte aparate electrice de încãlzit pentru dezgheţare.

Dupã topirea gheţii, eliminaţi apa cu o cârpã sau un burete, dupã care uscaţi bine.

6 Întreţinere şi curăţare

⚠ Nu curăţaţi aparatul cu benzină, benzen sau substanţe similare.

⚠ Recomandăm deconectarea aparatului de la priză înainte de curăţare.

⚠ Nu utilizaţi pentru curăţare instrumente ascuţite sau abrazive, săpun, substanţe de curăţare, detergenţi sau ceară de lustruire.

ⓘ Folosiţi apă călduţă pentru a curăţa interiorul, apoi ştergeţi cu o cârpă uscată.

ⓘ Ştergeţi interiorul cu o cârpă umezită într-o soluţie de o linguriţă de bicarbonat de sodiu dizolvat în 0,5l apă, apoi ştergeţi cu o cârpă uscată.

⚠ Asiguraţi-vă că nu intră apă în carcasa lămpii şi în alte componente electrice.

⚠ Dacă frigiderul nu va fi utilizat o perioadă lungă de timp, deconectaţi-l de la priză şi scoateţi toate alimentele, lăsând uşa întredeschisă.

ⓘ Verificaţi periodic garniturile uşii, asigurându-vă că nu s-au murdărit cu alimente.

⚠ Pentru a demonta rafturile de pe uşă, goliţi-le de alimente, apoi ridicaţi-le.

⚠ Nu utilizați niciodată agenți de curățare sau apă care conțin clor pentru a curăța suprafețele exterioare și părți ale produsului acoperite cu crom. Clorul provoacă coroziune pe astfel de suprafețe metalice.

Protejarea suprafeţelor din plastic

ⓘ Nu introduceţi în frigider ulei sau alimente gătite în ulei în recipiente fără capac, deoarece acestea vor deteriora suprafeţele din plastic ale frigiderului. Dacă uleiul ajunge pe suprafeţele din plastic, curăţaţi-le şi clătiţi-le imediat cu apă caldă.

7 Soluţii recomandate pentru probleme

Înainte de a apela la service, citiţi această listă. Puteţi economisi timp şi bani.
Lista include probleme frecvente care nu sunt provocate de defecte de material sau de manoperă. Este posibil ca unele funcţii descrise aici să nu existe în produsul dvs.

Frigiderul nu funcţionează
• Frigiderul este conectat corect la priză? >>>Introduceţi ştecherul în priză. • Siguranţa prizei la care este conectat frigiderul este arsă? >>>Verificaţi siguranţa.
Condens pe peretele lateral al compartimentului frigiderului. (MULTI ZONE, COOL CONTROL and FLEXI ZONE)
• Mediu foarte rece. >>>Deschidere frecventă a uşii. Mediu foarte umed. Păstrarea alimentelelor lichide în recipiente deschise. Uşă întredeschisă. • Selectaţi o temperatură mai joasă. • Reduceţi durata sau frecvenţa de deschidere a uşii. • Acoperiţi alimentele păstrate în recipiente deschise. • Ştergeţi condensul cu o cârpă uscată şi verificaţi dacă apare din nou.
Compresorul nu funcţionează
• Sistemul de protecţie termică a compresorului se va activa în cazul penelor de curent sau în cazul deconectării şi reconectării la priză, deoarece presiunea din sistemul de răcire nu este încă echilibrată. • Frigiderul va porni după circa 6 minute. Apelaţi la service dacă frigiderul nu porneşte după această perioadă. • Frigiderul este în modul de dezgheţare. >>>Acest mod este normal pentru un frigider cu dezgheţare automată. Ciclul de dezgheţare are loc periodic. • Frigiderul nu este conectat la priză. >>>Asiguraţi-vă că ştecherul este introdus corect în priză. • Aţi reglat corect temperatura? Pană de curent. >>>Luaţi legătura cu furnizorul de electricitate.
Zgomotul de funcționare crește atunci când frigiderul este pornit
• Performanța de funcționare a frigiderului poate varia în funcție de schimbările de temperatură din mediul ambiant. Acest fenomen este normal și nu un defect.

Frigiderul porneşte des sau funcţionează perioade lungi de timp.
• Este posibil ca noul frigider să fie mai mare decât cel vechi. Acest fenomen este normal. Frigiderele mari funcţionează perioade lungi de timp. • Este posibil ca temperatura din încăpere să fie ridicată. >>>Acest lucru este normal. • Este posibil ca frigiderul să fi fost conectat recent la priză sau să fi fost umplut recent cu alimente. >>>Răcirea completă a frigiderului poate dura două ore sau mai mult. • Este posibil ca în frigider să fi fost introduse recent cantităţi mari de alimente calde. Alimentele calde determină funcţionarea pe perioade lungi de timp a frigiderului, până la atingerea temperaturii corespunzătoare. • Este posibil ca uşile să fi fost deschise frecvent sau lăsate întredeschise mai mult timp. Aerul cald intrat în frigider determină funcţionarea pe perioade mai lungi. Deschideţi mai rar uşile. • Este posibil ca uşa compartimentului congelatorului sau frigiderului să fi fost lăsată întredeschisă. >>>Verificaţi dacă uşile sunt închise corect. • Aţi selectat o temperatură foarte joasă. >>>Selectaţi o temperatură mai ridicată şi aşteptaţi ca aceasta să fie atinsă. • Este posibil ca garnitura uşii frigiderului sau congelatorului să fie murdară, uzată, ruptă sau poziţionată incorect. >>>Curăţaţi sau înlocuiţi garnitura. Garniturile deteriorate/defecte determină funcţionarea pe perioade lungi de timp a frigiderului pentru a se asigura temperatura corectă.
Temperatura congelatorului este foarte joasă, iar temperatura frigiderului este adecvată.
• Aţi selectat o temperatură foarte joasă a congelatorului. >>>Selectaţi o temperatură mai ridicată a congleatorului.
Temperatura frigiderului este foarte joasă, iar temperatura congelatorului este adecvată.
• Aţi selectat o temperatură foarte joasă a frigiderului. >>>Selectaţi o temperatură mai ridicată a frigiderului.
Alimentele din sertarele frigiderului îngheaţă.
• Aţi selectat o temperatură foarte joasă a frigiderului. >>>Selectaţi o temperatură mai ridicată a frigiderului.
Temperatura din frigider sau congelator este foarte mare.
• Aţi selectat o temperatură foarte înaltă a frigiderului. >>>Temperatura setată pentru frigider afectează temperatura congelatorului. Modificaţi temperatura frigiderului sau congelatorului până când temperatura din frigider sau congelator ajunge la un nivel adecvat. • Ușile sunt deschise frecvent sau sunt lăsate întredeschise pentru o lungă perioadă de timp. >>>Nu deschideți ușile frecvent. • Este posibil ca uşa să fie întredeschisă. >>>Închideţi complet uşa. • Este posibil ca în frigider să fi fost introduse recent cantităţi mari de alimente calde. >>>Aşteptaţi ca frigiderul sau congelatorul să ajungă la temperatura adecvată. • Este posibil ca frigiderul să fi fost introdus recent în priză. >>>Răcirea completă a frigiderului ia mai mult timp, datorită dimensiunii sale.

Vibraţii sau zgomot.
• Podeaua este denivelată sau instabilă. Frigiderul se clatină când este împins uşor. >>>Asiguraţi-vă că podeaua este plană, stabilă şi poate susţine greutatea frigiderului. • Zgomotul poate fi provocat de obiectele amplasate pe frigider. >>> Aceste obiecte trebuie îndepărtate de pe frigider.
Zgomote asemănătoare curgerii sau pulverizării lichidelor.
• Funcţionarea frigiderului se bazează pe circulaţia gazelor şi lichidelor. >>>Acesta este un fenomen normal şi nu reprezintă o defecţiune.
Se aude un fluierat de la frigider.
• Se folosesc ventilatoare pentru a răci frigiderul. >>>Este normal și nu un defect.
Condens pe pereţii interiori ai frigiderului.
• Mediile calde şi umede favorizează formarea gheţii şi condensului. >>>Acesta este un fenomen normal şi nu reprezintă o defecţiune. • Uşile sunt întredeschise. >>>Asiguraţi-vă că uşile sunt închise complet. • Este posibil ca uşile să fi fost deschise frecvent sau lăsate deschise mai mult timp. >>>Deschideţi mai rar uşa.
Umiditate în exteriorul frigiderului sau între uşi.
• Este posibil ca mediul să fie umed. >>>Acest fenomen este normal în medii umede. La reducerea umidităţii, condensul va dispărea.
Mirosuri neplăcute în frigider.
• Interiorul frigiderului trebuie curăţat. >>>Curăţaţi interiorul frigiderului folosind un burete, apă caldă sau carbonatată. • Este posibil ca mirosul să se datoreze unor recipiente sau ambalaje. >>>Folosiţi un recipient sau un ambalaj diferit. • Alimentele sunt puse în frigider în recipiente neacoperite. >>>Păstrați alimentele în recipiente închise. Microorganismele care se răspândesc de la recipientele neacoperite pot provoca mirosuri neplăcute. • Scoateți din frigider alimentele stricate și cele care au expirat.
Uşa/uşile nu se închide/închid.
• Este posibil ca alimentele să împiedice închiderea uşii. >>>Mutaţi alimentele care împiedică închiderea uşii. • Este posibil ca frigiderul să fie înclinat sau instabil. >>>Ajustaţi picioarele de reglare. • Podeaua este denivelată sau instabilă. >>>Asiguraţi-vă că podeaua este plană şi poate susţine greutatea frigiderului.
Compartimentele pentru legume sunt blocate.
• Este posibil ca alimentele să atingă partea superioară a sertarului. >>>Rearanjaţi alimentele în sertar.

Please read this user manual first!

Dear Customer,

We hope that your product, which has been produced in modern plants and checked under the most meticulous quality control procedures, will provide you an effective service.

Therefore, read this entire user manual carefully before using the product and keep it as a reference. If you handover the product to someone else, give the user manual as well.

The user manual will help you use the product in a fast and safe way.

- Read the manual before installing and operating the product.
- Make sure you read the safety instructions.
- Keep the manual in an easily accessible place as you may need it later.
- Read the other documents given with the product.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Explanation of symbols

Throughout this user manual the following symbols are used:

Important information or useful tips.

Warning against dangerous conditions for life and property.

Warning against electric voltage.

CONTENTS

1 Your refrigerator 3

2 Important Safety Warnings 4

Intended use..... 4
General safety..... 4
For products with a water dispenser..... 6
Child safety..... 6
Compliance with the AEEE Regulation and Disposing of the Waste Product….. 6
Package information..... 7
HCA warning..... 7
Things to be done for energy saving….. 7

3 Installation 8

Points to be paid attention to when the relocation of the refrigerator.....8
Before you start the refrigerator,..... 8
Electrical connection..... 9
Disposing of the packaging..... 9
Disposing of your old refrigerator..... 9
Placing and Installation..... 9
Replacing the interior lamp 10
Reversing the doors..... 11

4 Preparation 12

5 Using your refrigerator 13
Thermostat setting button..... 13
Defrost……..... 13

6 Maintenance and cleaning 15
Protection of plastic surfaces 15

7 Troubleshooting 16

1 Your refrigerator

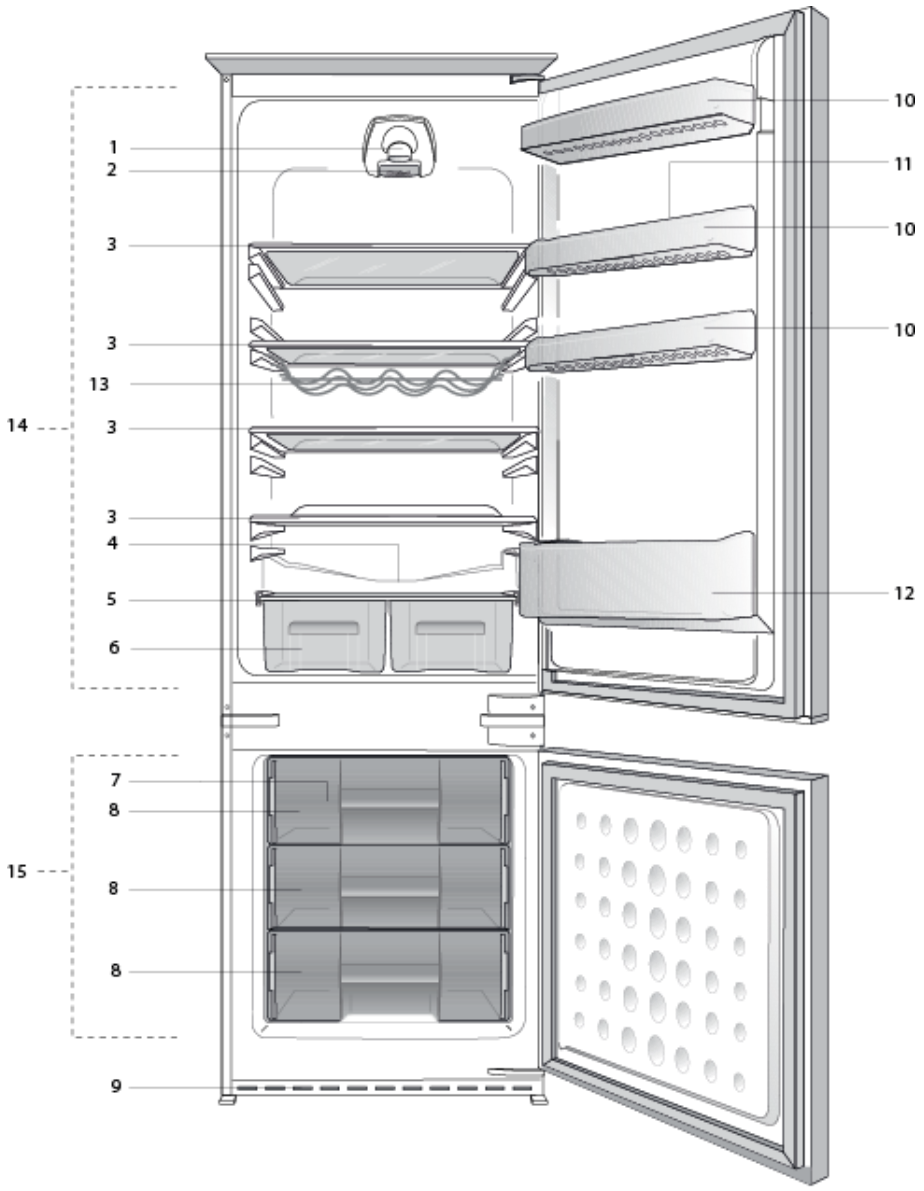

1. Temperature setting knob
2. Interior light
3. Adjustable Cabinet shelves
4. Defrost water collection channel - Drain tube
5. Crisper cover
6. Crisper
7. Ice tray support & ice tray
8. Freezer compartment
9. Air grill
10. Egg tray
11. Adjustable door shelves
12. Bottles shelf
13. Wine rack
14. Fridge compartment
15. Freezer compartment

*** Optional**

Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

2 Important Safety Warnings

Please review the following information. Failure to observe this information may cause injuries or material damage. Otherwise, all warranty and reliability commitments will become invalid.

The service life of your product is 10 years. During this period, original spare parts will be available to operate the product properly.

Intended use

This product is intended to be used

- indoors and in closed areas such as homes;
- in closed working environments such as stores and offices;
- in closed accommodation areas such as farm houses, hotels, pensions.
- It should not be used outdoors.

General safety

- When you want to dispose/scrap the product, we recommend you to consult the authorized service in order to learn the required information and authorized bodies.
- Consult your authorized service for all your questions and problems related to the refrigerator. Do not intervene or let someone intervene to the refrigerator without notifying the authorised services.
- For products with a freezer compartment; Do not eat cone ice cream and ice cubes immediately after you take them out of the freezer compartment! (This may cause frostbite in your mouth.)
- For products with a freezer compartment; Do not put bottled and canned liquid beverages in the freezer compartment. Otherwise, these may burst.
- Do not touch frozen food by hand; they may stick to your hand.
- Unplug your refrigerator before cleaning or defrosting.
- Vapor and vaporized cleaning materials should never be used in cleaning and defrosting processes of your refrigerator. In such cases, the vapor may get in contact with the electrical parts and cause short circuit or electric shock.
- Never use the parts on your refrigerator such as the door as a means of support or step.
- Do not use electrical devices inside the refrigerator.
- Do not damage the parts, where the refrigerant is circulating, with drilling or cutting tools. The refrigerant that might blow out when the gas channels of the evaporator, pipe extensions or surface coatings are punctured causes skin irritations and eye injuries.
- Do not cover or block the ventilation holes on your refrigerator with any material.
- Electrical devices must be repaired by only authorised persons. Repairs performed by incompetent persons create a risk for the user.

- In case of any failure or during a maintenance or repair work, disconnect your refrigerator's mains supply by either turning off the relevant fuse or unplugging your appliance.
- Do not pull by the cable when pulling off the plug.
- Place the beverage with higher proofs tightly closed and vertically.
- Never store spray cans containing flammable and explosive substances in the refrigerator.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are attended by a person who will be responsible for their safety or who will instruct them accordingly for use of the product.
- Do not operate a damaged refrigerator. Consult with the service agent if you have any concerns.
- Electrical safety of your refrigerator shall be guaranteed only if the earth system in your house complies with standards.
- Exposing the product to rain, snow, sun and wind is dangerous with respect to electrical safety.
- Contact authorized service when there is a power cable damage to avoid danger.
- Never plug the refrigerator into the wall outlet during installation. Otherwise, risk of death or serious injury may arise.
- This refrigerator is intended for only storing food items. It must not be used for any other purpose.
- Label of technical specifications is located on the left wall inside the refrigerator.
- Never connect your refrigerator to electricity-saving systems; they may damage the refrigerator.
- If there is a blue light on the refrigerator, do not look at the blue light with optical tools.
- For manually controlled refrigerators, wait for at least 5 minutes to start the refrigerator after power failure.
- This operation manual should be handed in to the new owner of the product when it is given to others.
- Avoid causing damage on power cable when transporting the refrigerator. Bending cable may cause fire. Never place heavy objects on power cable.
- Do not touch the plug with wet hands when plugging the product.

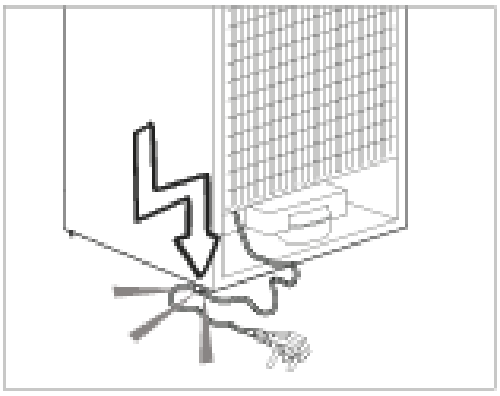

- Do not plug the refrigerator if the wall outlet is loose.
- Water should not be sprayed on inner or outer parts of the product for safety purposes.

- Do not spray substances containing inflammable gases such as propane gas near the refrigerator to avoid fire and explosion risk.
- Never place containers filled with water on top of the refrigerator; in the event of spillages, this may cause electric shock or fire.
- Do not overload the refrigerator with food. If overloaded, the food items may fall down and hurt you and damage refrigerator when you open the door.
- Never place objects on top of the refrigerator; otherwise, these objects may fall down when you open or close the refrigerator's door.
- As they require a precise temperature, vaccines, heat-sensitive medicine and scientific materials and etc. should not be kept in the refrigerator.
- If not to be used for a long time, refrigerator should be unplugged. A possible problem in power cable may cause fire.
- The plug's tip should be cleaned regularly with a dry cloth; otherwise, it may cause fire.
- Refrigerator may move if adjustable legs are not properly secured on the floor. Properly securing adjustable legs on the floor can prevent the refrigerator to move.
- When carrying the refrigerator, do not hold it from door handle. Otherwise, it may be snapped.
- When you have to place your product next to another refrigerator or freezer, the distance between devices should be at least 8cm. Otherwise, adjacent side walls may be humidified.

For products with a water dispenser;

Pressure of water mains should be minimum 1 bar. Pressure of water mains should be maximum 8 bars.

- Use only potable water.

Child safety

- If the door has a lock, the key should be kept away from reach of children.
- Children must be supervised to prevent them from tampering with the product.

Compliance with the AEEE Regulation and Disposing of the Waste Product

The symbol [redacted] on the product or on packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, you household waste disposal service or the shop where you purchased the product.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Do not forget...

Any recycled substance is an indispensable matter for nature and our national asset wealth.

If you want to contribute to the reevaluation of the packaging materials, you can consult to your environmentalist organizations or the municipalities where you are located.

HCA warning

If your product's cooling system contains R600a:

This gas is flammable. Therefore, pay attention to not damaging the cooling system and piping during usage and transportation. In the event of damage, keep your product away from potential fire sources that can cause the product catch a fire and ventilate the room in which the unit is placed.

Type of gas used in the product is stated in the type label which is on the left wall inside the refrigerator.

Never throw the product in fire for disposal.

Things to be done for energy Saving

- Do not leave the doors of your refrigerator open for a long time.
- Do not put hot food or drinks in your refrigerator.
- Do not overload your refrigerator so that the air circulation inside of it is not prevented.
- Do not install your refrigerator under direct sunlight or near heat emitting appliances such as ovens, dishwashers or radiators. Keep your refrigerator at least 30cm away from heat emitting sources and at least 5cm from electrical ovens.
- Pay attention to keep your food in closed containers.
- You can load maximum amount of food to the freezer compartment of the refrigerator by removing the freezer compartment drawers. Declared energy consumption value of the refrigerator was determined with the freezer compartment drawers removed. There is no risk in using a shelf or drawer suitable for the shapes and sizes of the foods to be frozen.
- Thawing frozen food in fridge compartment will both provide energy saving and preserve the food quality.

The ambient temperature of the room where you install the refrigerator should at least be -15°C. Operating your refrigerator under colder conditions than this is not recommended.

Inside of your refrigerator must be cleaned thoroughly.

3 Installation

⚠ In case the information which are given in the user manual are not taken into account, manufacturer will not assume any liability for this.

Points to be paid attention to when the relocation of the refrigerator

1. Your refrigerator should be unplugged.Before transportation of your refrigerator, it should be emptied and cleaned.
2. Before it is re-packaged, shelves, accessories, crisper, etc. inside your refrigerator should be fixed with adhesive tape and secured against impacts. Package should be bound with a thick tape or sound ropes and the transportation rules on the package should be strictly observed.
3. Original packaging and foam materials should be kept for future transportations or moving.

Before you start the refrigerator,

Check the following before you start to use your refrigerator:

1. Attach 2 plastic wedges as illustrated below. Plastic wedges are intended to keep the distance which will ensure the air circulation between your refrigerator and the wall. (The picture is drawn up as a representation and it is not identical with your product.)

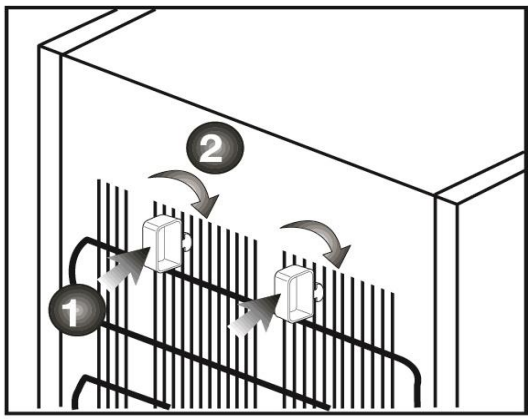

2. Clean the interior of the refrigerator as recommended in the “Maintenance and cleaning” section.
3. Connect the plug of the refrigerator to the wall socket. When the fridge door is opened, fridge internal lamp will turn on.
4. When the compressor starts to operate, a sound will be heard. The liquid and gases sealed within the refrigeration system may also give rise to noise, even if the compressor is not running and this is quite normal.
5. Front edges of the refrigerator may feel warm. This is normal. These areas are designed to be warm to avoid condensation.

Electrical connection

Connect your product to a grounded socket which is being protected by a fuse with the appropriate capacity. Important:

The connection must be in compliance with national regulations.

- The power plug must be easily accessible after installation.
- Electrical safety of your refrigerator shall be guaranteed only if the earth system in your house complies with standards.
- The voltage stated on the label located at left inner side of your product should be equal to your network voltage.
- **Extension cables and multi plugs must not be used for connection.**

⚠ A damaged power cable must be replaced by a qualified electrician.

⚠ Product must not be operated before it is repaired! There is the risk of electric shock!

Disposing of the packaging

The packing materials may be dangerous for children. Keep the packing materials out of the reach of children or dispose of them by classifying them in accordance with the waste instructions stated by your local authorities. Do not throw away with regular house waste, throw away on packaging pick up spots designated by the local authorities.

The packing of your refrigerator is produced from recyclable materials.

Disposing of your old Refrigerator

Dispose of your old refrigerator without giving any harm to the environment.

- You may consult your authorized dealer or waste collection center of your municipality about the disposal of your refrigerator.

Before disposing of your refrigerator, cut out the electric plug and, if there are any locks on the door, make them inoperable in order to protect children against any danger.

Placing and Installation

⚠ If the entrance door of the room where the refrigerator will be installed is not wide enough for the refrigerator to pass through, then call the authorized service to have them remove the doors of your refrigerator and pass it sideways through the door.

1. Install your refrigerator to a place that allows ease of use.
2. Keep your refrigerator away from heat sources, humid places and direct sunlight.
3. There must be appropriate air ventilation around your refrigerator in order to achieve an efficient operation. If the refrigerator is to be placed in a recess in the wall, there must be at least 5 cm distance with the ceiling and at least 5 cm with the wall. Do not place your product on the materials such as rug or carpet.
4. Place your refrigerator on an even floor surface to prevent jolts.

Replacing the interior lamp

Should the light fail to work, proceed as follows.
1. Switch off at the socket outlet and pull out the mains plug.You may find it useful to remove shelves for easy access.
2. Use a flat tipped screwdriver to remove the light diffuser cover.
3. First check that the lamp hasn’t worked loose by ensuring it is screwed securely in the holder.
Replace the plug and switch on.
4. If the lamp works, replace the light cover by inserting the rear lug and pushing up to locate the front two lugs.
5. If the light still fails to work, switch off at the socket outlet and pull out the mains plug. Replace the lamp with a new 15 watt (max) screw cap (SES) lamp.
6. Carefully dispose of the burnt-out lamp immediately.
7. Replacement light lamp can easily be obtained from a good local electrical or DIY store.

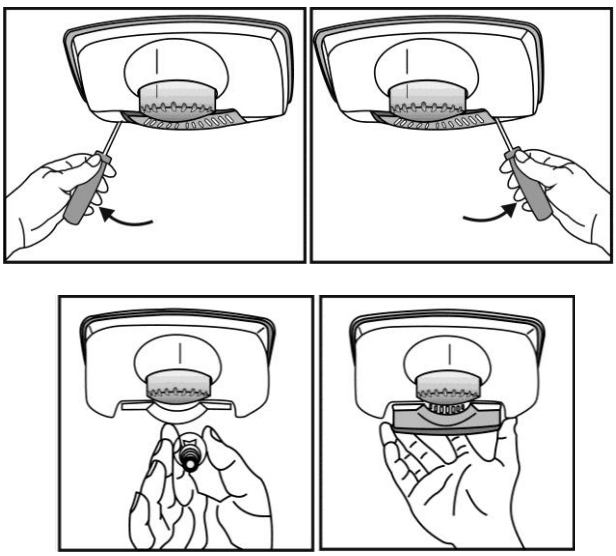

Reversing the doors

Proceed in numerical order

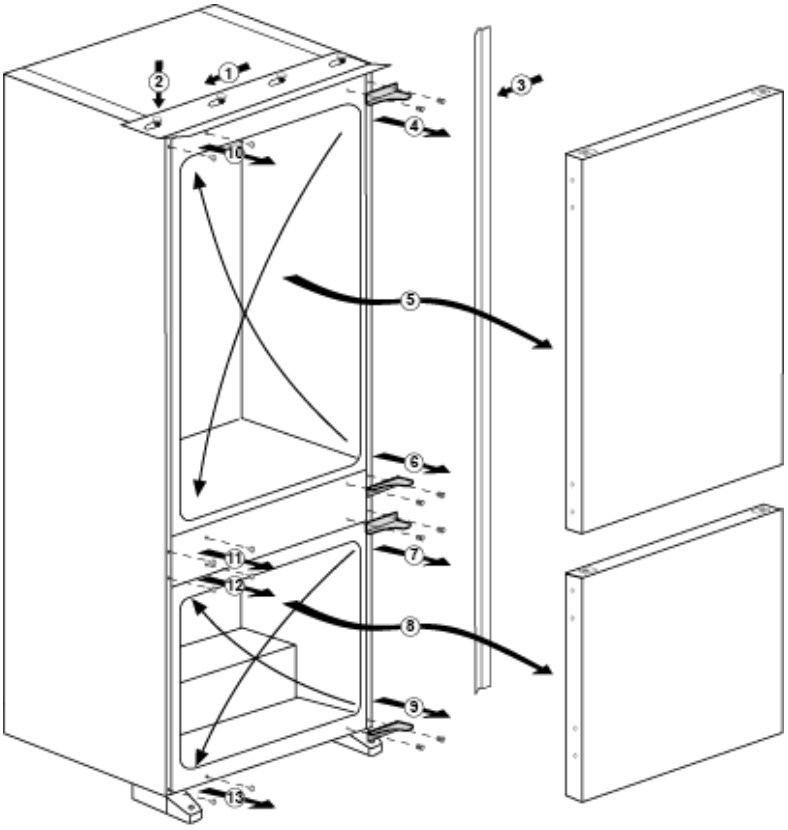

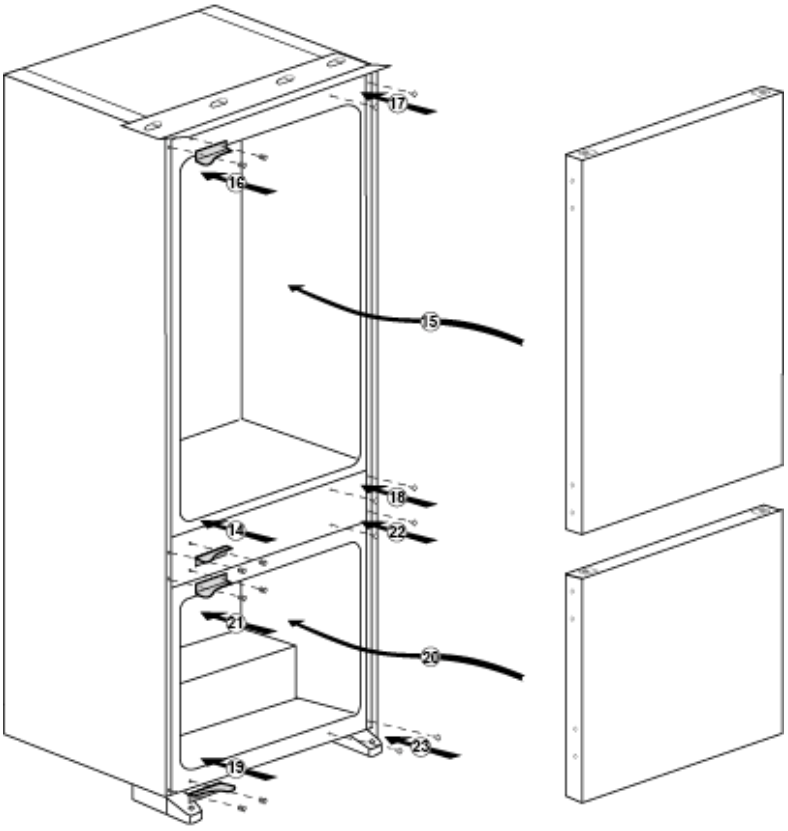

4 Preparation

- Your refrigerator should be installed at least 30 cm away from heat sources such as hobs, ovens, central heater and stoves and at least 5 cm away from electrical ovens and should not be located under direct sunlight.
- The ambient temperature of the room where you install your refrigerator should at least be 10°C. Operating your refrigerator under cooler conditions is not recommended with regard to its efficiency.
- Please make sure that the interior of your refrigerator is cleaned thoroughly.
- If two refrigerators are to be installed side by side, there should be at least 2 cm distance between them.
- When you operate your refrigerator for the first time, please observe the following instructions during the initial six hours.
- The door should not be opened frequently.
- It must be operated empty without any food in it.
- Do not unplug your refrigerator. If a power failure occurs out of your control, please see the warnings in the “Recommended solutions for the problems” section.
- Original packaging and foam materials should be kept for future transportations or moving.

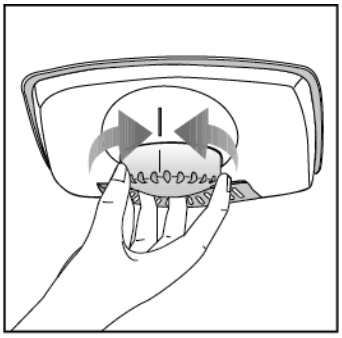

Thermostat setting button

The interior temperature of your refrigerator changes for the following reasons;

- Seasonal temperatures,
- Frequent opening of the door and leaving the door open for long periods,
- Food put into the refrigerator without cooling down to the room temperature,
- The location of the refrigerator in the room (e.g. exposing to sunlight).
- You may adjust the varying interior temperature due to such reasons by using the thermostat. Numbers around the thermostat button indicates the cooling degrees.
- If the ambient temperature is higher than 32 °C, turn the thermostat button to maximum position.
- If the ambient temperature is lower than 25 °C, turn the thermostat button to minumum position.

Defrost

A) Fridge compartment

Fridge compartment performs fullautomatic defrosting. Water drops and a frosting up to 7-8 mm can occur on the inner rear wall of the fridge compartment while your refrigerator cools down. Such formation is normal as a result of the cooling system.
The frost formation is defrosted by performing automatic defrosting with certain intervals thanks to the automatic defrosting system of the rear wall. User is not required to scrape the frost or remove the water drops.
Water resulting from the defrosting passes from the water collection groove and flows into the evaporator through the drain pipe and evaporates here by itself. Check regularly to see if the drain pipe is clogged or not and clear it with the stick in the hole when necessary.
Deep freezer compartment does not perform automatıc defrosting in order to prevent decaying of the frozen food The freezer compartment defrosts automatically.

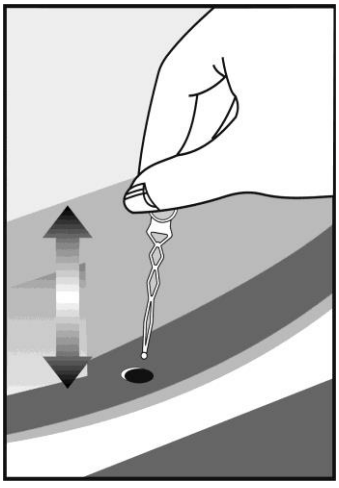

B) Freezer compartment

Defrosting is very straightforward and without mess, thanks to a special defrost collection basin.
Defrost twice a year or when a frost layer of around 7 (1/4”) mm has formed. To start the defrosting procedure, switch off the appliance at the socket outlet and pull out the mains plug.
All food should be wrapped in several layers of newspaper and stored in a cool place (e.g. fridge or larder).
Containers of warm water may be placed carefully in the freezer to speed up the defrosting.
Do not use pointed or sharp-edged objects, such as knives or forks to remove the frost.
Never use hair dryers, electrical heaters or other such electrical appliances for defrosting.
Sponge out the defrost water collected in the bottom of the freezer compartment. After defrosting, dry the interior thoroughly.
Insert the plug into the wall socket and switch on the electricity supply.

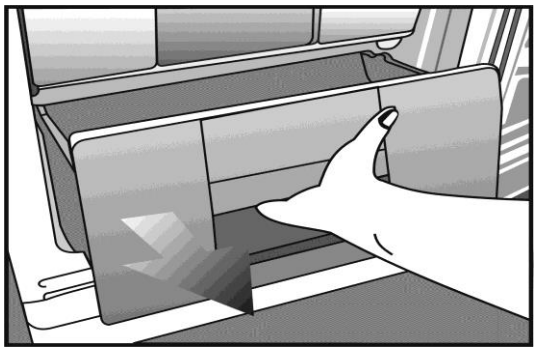

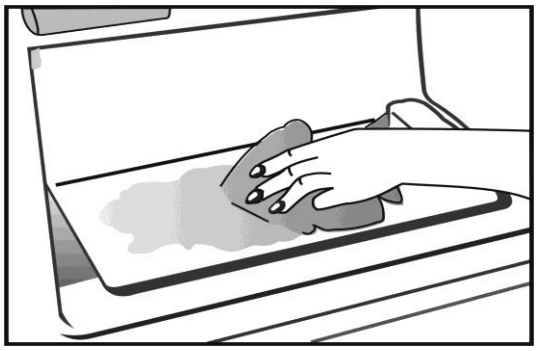

6 Maintenance and cleaning

⚠ Never use gasoline, benzene or similar substances for cleaning purposes.

⚠ We recommend that you unplug the ppliance before cleaning.

⚠ Never use any sharp abrasive instrument, soap, household cleaner, detergent and wax polish for cleaning.

ⓘ Use lukewarm water to clean the cabinet of your refrigerator and wipe it dry.

ⓘ Use a damp cloth wrung out in a solution of one teaspoon of bicarbonate of soda to one pint of water to clean the interior and wipe it dry.

⚠ Make sure that no water enters the lamp housing and other electrical items.

⚠ If your refrigerator is not going to be used for a long period of time, unplug the power cable, remove all food, clean it and leave the door ajar.

ⓘ Check door seals regularly to ensure they are clean and free from food particles.

⚠ To remove door racks, remove all the contents and then simply push the door rack upwards from the base.

⚠ Never use cleaning agents or water that contain chlorine to clean the outer surfaces and chromium coated parts of the product. Chlorine causes corrosion on such metal surfaces.

Protection of plastic surfaces

ⓘ Do not put the liquid oils or oil-cooked meals in your refrigerator in unsealed containers as they damage the plastic surfaces of your refrigerator. In case of spilling or smearing oil on the plastic surfaces, clean and rinse the relevant part of the surface at once with warm water.

7 Troubleshooting

Please review this list before calling the service. It will save your time and money. This list includes frequent complaints that are not arising from defective workmanship or material usage. Some of the features described here may not exist in your product.

The refrigerator does not operate.
• The plug is not inserted into the socket correctly. >>>Insert the plug into the socket securely. • The fuse of the socket which your refrigerator is connected to or the main fuse have blown out. >>>Check the fuse.
Condensation on the side wall of the fridge compartment (MULTIZONE, COOL CONTROL and FLEXI ZONE).
• Ambient is very cold. >>>Do not install the refrigerator in places where the temperature falls below 10 °C. • Ambient is very humid. >>>Do not install your refrigerator into highly humid places. • Food containing liquid is stored in open containers. >>>Do not store food with liquid content in open containers. • Door of the refrigerator is left ajar. >>>Close the door of the refrigerator. • Thermostat is set to a very cold level. >>>Set the thermostat to a suitable level.
Compressor is not running
• Protective thermic of the compressor will blow out during sudden power failures or plug-out plug-ins as the refrigerant pressure in the cooling system of the refrigerator has not been balanced yet. The refrigerator will start running approximately after 6 minutes. Please call the service if the refrigerator does not startup at the end of this period. • The fridge is in defrost cycle. >>>This is normal for a full-automatically defrosting refrigerator. Defrosting cycle occurs periodically. • The refrigerator is not plugged into the socket. >>>Make sure that the plug is fit into the socket. • Temperature settings are not made correctly. >>>Select the suitable temperature value. • There is a power outage. >>>Refrigerator returns to normal operation when the power restores.
The operation noise increases when the refrigerator is running.
• The operating performance of the refrigerator may change due to the changes in the ambient temperature. It is normal and not a fault.

The refrigerator is running frequently or for a long time.
• New product may be wider than the previous one. Larger refrigerators operate for a longer period of time. • The room temperature may be high. >>>It is normal that the product operates for longer periods in hot ambient. • The refrigerator might be plugged in recently or might be loaded with food. >>>When the refrigerator is plugged in or loaded with food recently, it will take longer for it to attain the set temperature. This is normal. • Large amounts of hot food might be put in the refrigerator recently. >>>Do not put hot food into the refrigerator. • Doors might be opened frequently or left ajar for a long time. >>>The warm air that has entered into the refrigerator causes the refrigerator to run for longer periods. Do not open the doors frequently. • Freezer or fridge compartment door might be left ajar. >>>Check if the doors are closed completely. • The refrigerator is adjusted to a very low temperature. >>>Adjust the refrigerator temperature to a warmer degree and wait until the temperature is achieved. • Door seal of the fridge or freezer may be soiled, worn out, broken or not properly seated. >>>Clean or replace the seal. Damaged/broken seal causes the refrigerator to run for a longer period of time in order to maintain the current temperature.
Freezer temperature is very low while the fridge temperature is sufficient.
• The freezer temperature is adjusted to a very low value. >>>Adjust the freezer temperature to a warmer degree and check.
Fridge temperature is very low while the freezer temperature is sufficient.
• The fridge temperature is adjusted to a very low value. >>>Adjust the fridge temperature to a warmer degree and check.
Food kept in the fridge compartment drawers is frozen.
• The fridge temperature is adjusted to a very high value. >>>Adjust the fridge temperature to a lower value and check.
Temperature in the fridge or freezer is very high.
• The fridge temperature is adjusted to a very high value. >>>Fridge compartment temperature setting has an effect on the temperature of the freezer. Change the temperatures of the fridge or freezer and wait until the relevant compartments attain a sufficient temperature. • Doors are opened frequently or left ajar for a long time. >>>Do not open the doors frequently. • Door is ajar. >>>Close the door completely. • The refrigerator is plugged in or loaded with food recently. >>>This is normal. When the refrigerator is plugged in or loaded with food recently, it will take longer for it to attain the set temperature. • Large amounts of hot food might be put in the refrigerator recently. >>>Do not put hot food into the refrigerator.

Vibrations or noise.
• The floor is not level or stable. >>>If the refrigerator rocks when moved slowly, balance it by adjusting its feet. Also make sure that the floor is strong enough to carry the refrigerator, and level. • The items put onto the refrigerator may cause noise. >>>Remove the items on top of the refrigerator.
There are noises coming from the refrigerator like liquid flowing, spraying, etc.
• Liquid and gas flows occur in accordance with the operating principles of your refrigerator. >>>It is normal and not a fault.
Whistle comes from the refrigerator.
• Fans are used in order to cool the refrigerator. >>>It is normal and not a fault.
Condensation on the inner walls of refrigerator.
• Hot and humid weather increases icing and condensation. >>>It is normal and not a fault. • Doors are opened frequently or left ajar for a long time. >>>Do not open the doors frequently. Close them if they are open. • Door is ajar. >>>Close the door completely.
Humidity occurs on the outside of the refrigerator or between the doors.
• There might be humidity in the air; this is quite normal in humid weather. When the humidity is less, condensation will disappear.
Bad odour inside the refrigerator.
• No regular cleaning is performed. >>>Clean the inside of the refrigerator regularly with a sponge, lukewarm water or carbonate dissolved in water. • Some containers or package materials may cause the smell. >>>Use a different container or different brand packaging material. • Food is put into the refrigerator in uncovered containers. >>>Keep the food in closed containers. Microorganisms spreading out from uncovered containers can cause unpleasant odours. • Remove the foods that have expired best before dates and spoiled from the refrigerator.
The door is not closing.
• Food packages are preventing the door from closing. >>>Replace the packages that are obstructing the door. • The refrigerator is not completely even on the floor. >>>Adjust the feet to balance the refrigerator. • The floor is not level or strong. >>>Make sure that the floor is level and capable to carry the refrigerator.
Crispers are stuck.
• The food is touching the ceiling of the drawer. >>>Rearrange food in the drawer.

4578335639/AB
RO-EN